

THE ORIGINAL RESINATOR - QUICK START GUIDE




Installing drum screen -

1 -Carefully place screen around drum and fasten installation zipper.

2 -Place nylon strap through metal clip.

3 -Hand tighten by firmly pulling strap to apply tension.

4 -Place loose end of nylon strap into elastic loop. Repeat on alternate side.

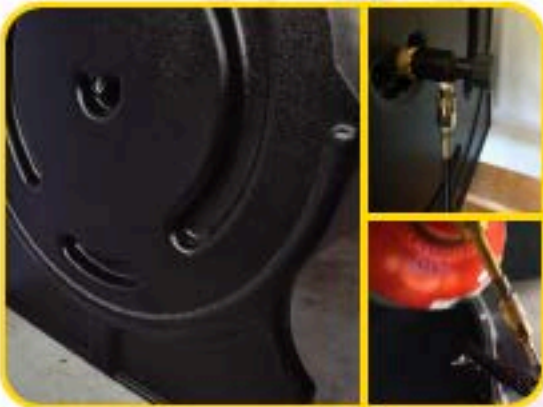

CO2/Flash Freeze -

Attach coil hose by inserting quickcoupler plug (through external side port) into quick coupler body (attached to drum shaft). Screw coil nipple/nut to CO2 tank and tighten. Adhere thermometer to lid & place probe into chamber for temp observation.

(See extraction guide) *Use manual regulation of CO2 valve to control pressure/PSI.

***Use liquid gas in a well ventilated area.**



H2O/Bubble While you Tumble -

Add adequate ice. (Should go in with material.) Fill with water to water line on chamber sides.

(Just above lower drum rods.) Use stopwatch for to time.

(See extraction guide) *Agitation not necessary

***Do not get motor wet or leave outside in rain.**



Dry-ice/Frozen Resination -

Add adequate dry-ice. (Should go in with material.) Use stopwatch to time.

(See extraction guide)

***Use gloves when handling dry-ice.**